

# 2-WIRE INTERCOM SYSTEM

---

## USER MANUAL




---

**Please read this manual carefully before using the product, and keep it well.**


# 1.Parts and functions

---

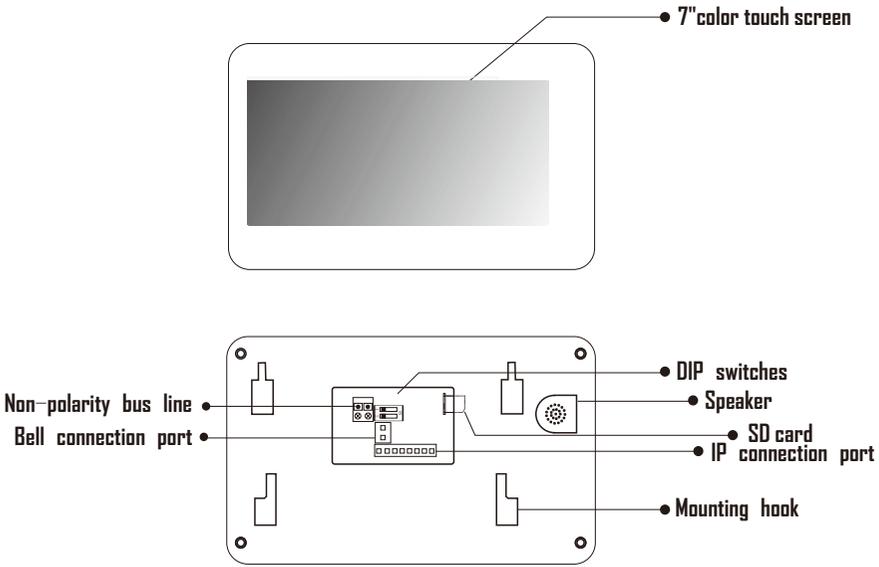

# 2.Monitor mounting


---

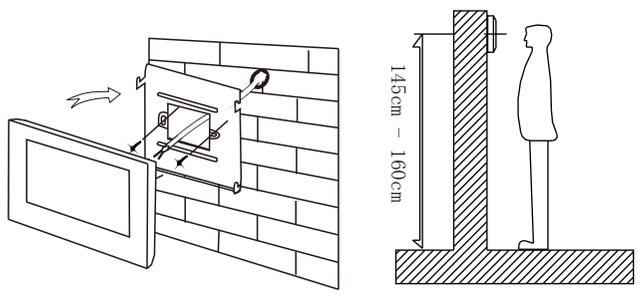

Using the screws to fix the mounting bracket on the wall.  
Connecting the system correctly, then hang the monitor on the mounting bracket firmly.

### 3.Main menu

The main menu is your starting point for using all the applications on your monitor. Touch anywhere of the screen on monitor in standby mode, the main menu page will be shown as follows:

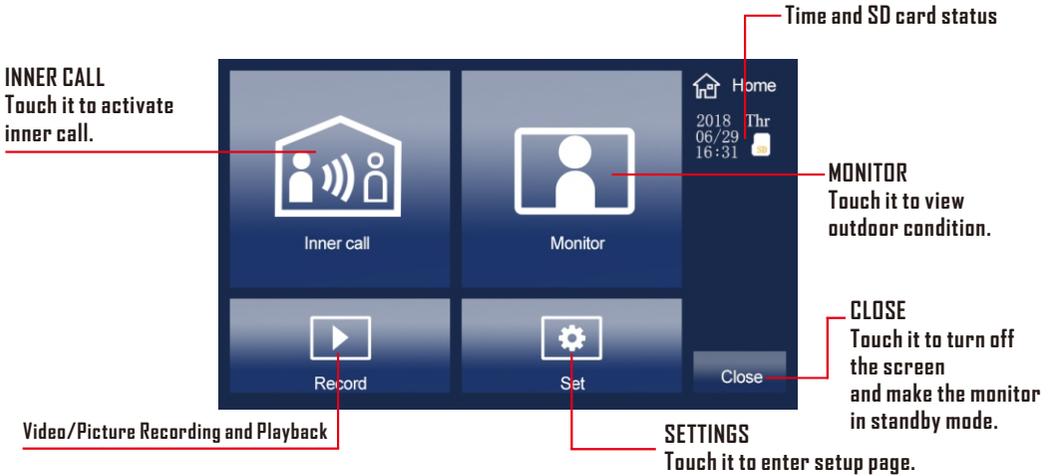

### 4.Room monitor and door station intercom page


4.1 Touch icon on screen begin communicating hands free with the visitor for 90 seconds, the conversation time can be adjust on setting page. Touch to end the conversation and enter standby mode.

4.2 When there is a call from a video door station, the ringing time is the song time which you have selected,If nobody answers the phone,it will be turned off automatically after 90 seconds.

4.3 While communicating with the visitor, touch the door unlock, if need to set the unlock time,please refer to the door station descriptions.

4.4 If there is extra camera, Touch can switch the monitor view between the door station camera and extra camera.

4.5 Touch for more funtions setting.

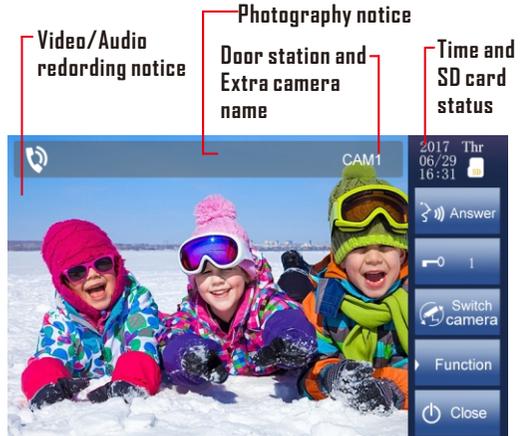

4.6. Touch  will start taking pictures, there will come out photo small icon notice, when select SD card storage location, the picture will be saved in the SD card, when select internal storage location, the picture is stored in the flash storage.



4.7. Only when insert the SD card and select SD card as the storage location, the video function can working, touch  will start taking video, touch  again to close the video, there will come out video recording small icon notice.

4.8. Touch  adjusting images, details refer 10.1 section.



4.9. Touch  adjusting voice, details refer 9.1 section.

4.10. Touch  to enter last list page.

## 5.Inner call function

5.1 Touch  on the main menu, enter inner call page to choose room NO.

5.2 Touch   choose last/next page, touch  start calling.

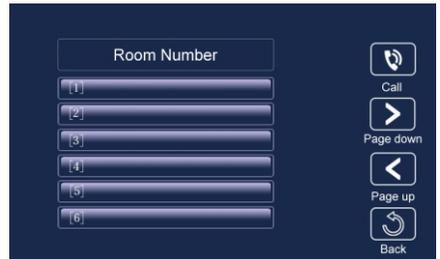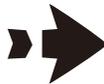



# 6. Monitoring

Touch  icon on main menu page to enter monitor select page, choose door station and extra camera.



# 7. Picture/video/audio

## 7.1 Taking picture and video

7.1.1 The room screen can take picture or video automatically or manually, original setting is take picture /video automatically. 3 seconds after conversation start it will start recording video automatically. Touch   can change to manually mode.

## 7.2 Audio record

7.2.1 Room monitor will take audio record in this 2 situation:

1. Monitor to monitor call.
2. When select SD card as the storage location, door station to monitor call.

## 7.3 Video/Picture/Audio Playback

7.3.1 Touch  enter playback page to select Audio/Video/Picture playback.




7.3.2 Touch   select next/last object.Touch  for seconds pause,touch  continue. Touch  delete the object.Touch  enter to last page.



- Note:**
- 1.We must format the SD card by the computer before insert it into the room monitor. Details refer 12.2 section.
  - 2.Only when insert the SD card and select SD card as the storage location, then can take picture and video.
  - 3.Audio/ video record time can be adjust, original setting video is 64M, audio is 16S.
  - 4.Without the SD card, the monitor could store 6 pictures and 2 audio only.
  - 5.Only support SD card more than 4M/s.
  - 6.Up to 32G micro SD card.

## 8.Ringtone setting

Touch  enter ringtone setting page, select the the door station of which need to change ringtone, select the ringtone, touch  save and extic,touch  cancel the setting. Original setting is 16 pieces ringtone, can change as customer request.

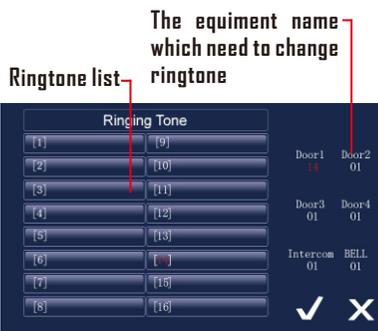

## 9.Adjusting the volume

Touch  enter volume adjusting page.

Day time (8:00-20:59) ringing volume adjusting range is 0- 10.

Night time(21:00-7:59) ringing volume adjusting range is 0- 10.

MIC and speaker volume adjusting range is 0-15.



## 10.Adjusting screen

Touch  adjust the brightness of the screen ,the range is 0~12, touch - or + to change the level.

Touch  adjust the color of the screen, the range is 0~12,touch - or + to change the level.

Touch  adjust the contrast of the screen, the range is 0~12,touch - or  to change the level.



## 11.Time setting.


Touch  enter time setting page,r-oommonitor is 24 hours time format .If input wrong format then setting fail,touch   to adjust.




# 12.SD card parameter setting

12.1 Touch  enter SD card parameter setting page, then touch  to select storage location.


Note: Without SD card but select SD card storage can not store documents.

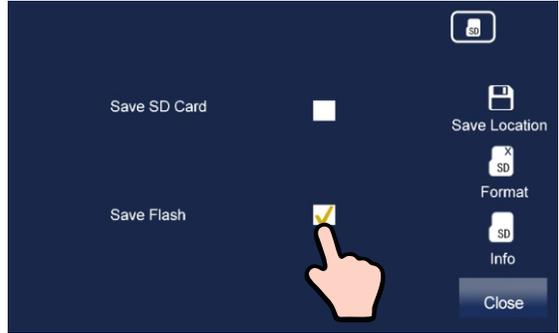

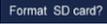12.2 Touch , the left side will show , touch  will format the SD card. We must format the SD card before the first time using the SD card.



12.3 Touch  the left side show SD storage information and available capacity for SD cards and flashstorage.

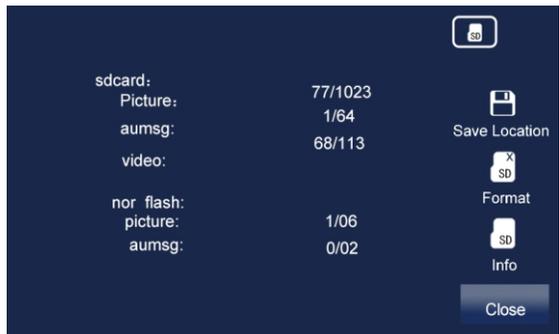

## 13. Personalized setting

Touch  enter personalized setting page, you can choose automatically photography and video recording or not, intercall disable or not, and set conversation time. Original setting is automatically photography and video recording, conversation time 0-180 seconds.



## 14. Room monitor ID setting


Touch  enter room monitor ID setting page.

when one monitor ID have only one monitor, the monitor should set to master mode. When one monitor ID have more than one monitor, one of the monitor set to master mode, others monitor set to slave mode.



## 15. Language


Click on  to enter the multi-language selection interface, to the  language you are using, click  to save selected language and exit, there are eight countries to choose from languages, according to customer request will add more languages.

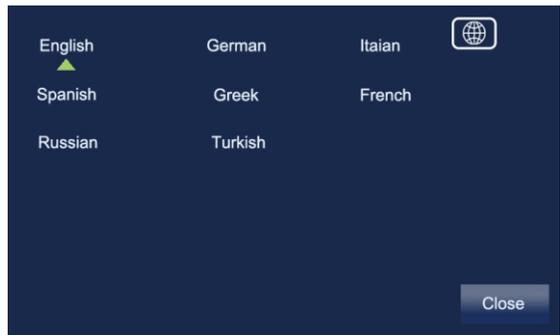

## 16.Setting

---

Click  icon on the setting page jump to others setting options.

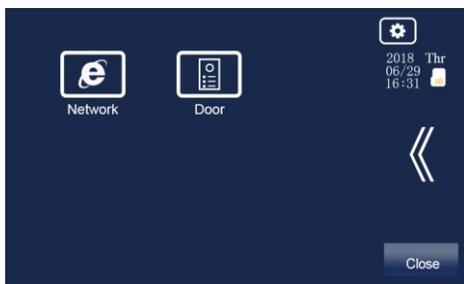

## 17.Network

---

Choose network call transfer option on the net page, it can also adjust the voice of the network transmission mic and speaker.



## 18.Door station and extra camera


---

Set the quantity of door station and extra camera on the door page so that switch to see the door station and extra camera. Default setting is 1 door station, no extra camera.



## 19. User codes (monitor bit codes) setup


Bit-1 is the line-terminal switch, Last monitor to ON, other set OFF.  
 Bit-2 is to turn the ringtone at the door station to ON/OFF.

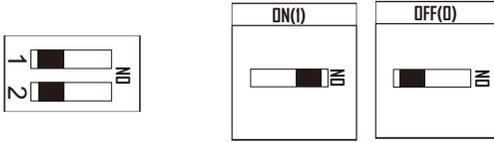

Bit state	Setting	Bit state	Setting
	Monitor NOT at the end of the line		Monitor at the end of the line

## 20. IP wiring diagram:

IP module can be added to PA7W, and the connection diagram is as follows:

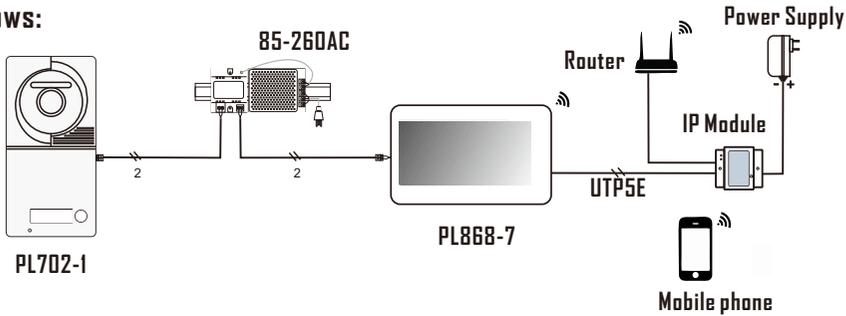

## 21. Specification

Power supply:

DC 24V (supplied by adaptor)

Power consumption:

Standby 15mA, working 350mA

Wiring

2 wires, non-polarity

The design and specifications can be changed without notice to the user. Right to interpret and copyright of this manual are preserved.